


UK

orbiloc

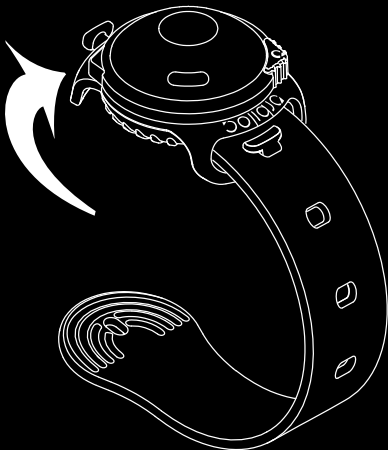

DOG DUAL USER MANUAL

THE SAFETY LIGHT
MADE IN DENMARK

Register for your 3-year warranty
at www.orbiloc.com/warranty

INTRODUCTION	04
BASIC PRINCIPLES	06
WARRANTY	07
GETTING STARTED.....	08
ON / OFF / STEADY / FLASH	08
CHANGE MOUNT	09
ORBILOC ACCESSORIES	10
ORBILOC SERVICE KIT.....	10
CHANGE BATTERY AND MAINTAIN.	11
ORBILOC MOUNTS.....	12
QUICK MOUNT ADJUSTABLE	14
ORBILOC BUCKLE MOUNT	15
ORBILOC VELCRO STRAP.....	15
ORBILOC RUBBER STRAP.....	16
ORBILOC CARABINER MOUNT....	17
ORBILOC CLIP MOUNT	17
ORBILOC ARMBAND	18
ADDENDUM	19


**Congratulations on your new
Orbiloc Dog Dual™
Safety Light**

© 2017 Orbiloc. All rights reserved.

*The Orbiloc™ name and logo are
among the trademarks of Orbiloc,
registred in the U.S., EU, NO and CN.*

*Our three-year warranty applies to the
Orbiloc Dog Dual. Please visit:
www.orbiloc.com/warranty*

*To get the most out of your new high
quality Orbiloc Dog Dual Safety Light™,
please read the User Manual carefully.*

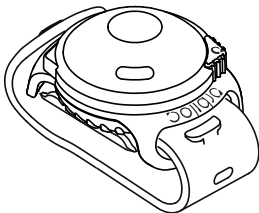

INTRODUCTION

Orbiloc Dog Dual


Orbiloc Dog Dual is a high quality LED Safety Light designed to keep both you and your dog safe.







The Orbiloc Dog Dual Safety Light ensures that both of you are visible to others when out and about in the dark, drastically reducing the risk of being involved in an accident or dangerous situation.

Stay Safe and Visible

With Orbiloc Dog Dual, other road users will be able to spot you from a distance of up to five kilometres, which leaves them plenty of time to react.


EXTRA MOUNTS INCLUDED

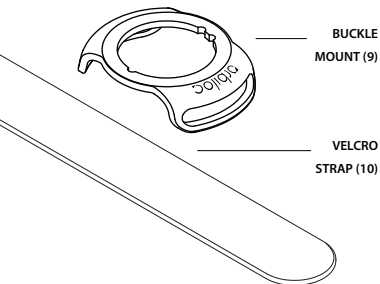

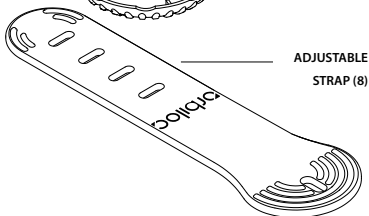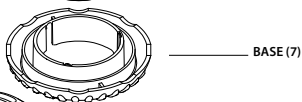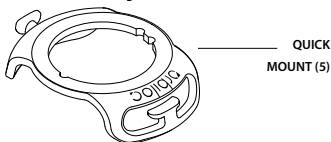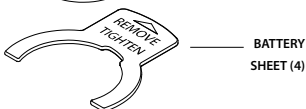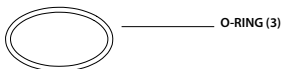

BASIC PRINCIPLES

Please take care of your new **Orbiloc Dog Dual™** and accessories. Read the specific recommendations for each product in our User Manual, available at www.orbiloc.com.

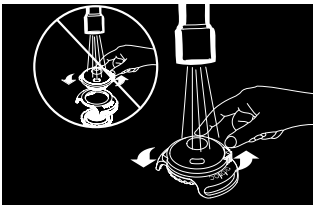

If the **Orbiloc Dog Dual Light** gets muddy or exposed to sea water, please rinse the outside of the Light with running water while turning the **Mode Selector Ring (2)**. Do not open or disassemble while rinsing.

Remove the **Battery Pack (6)** for long-term storage of the Light, and store the batteries in a dry, well-ventilated area, out of direct sunlight.

Please note that unless your **Orbiloc Dog Dual Light** is modified or repaired by Orbiloc, your warranty will become invalid. This does not apply to original Orbiloc replacement parts.

Orbiloc is not responsible for any injury or damage, whether direct, indirect or accidental, resulting from the use of its Lights or Accessories.

WARRANTY



Orbiloc Dog Dual Lights are manufactured to the highest standards of quality and technology, which is why we offer a three-year warranty – absolutely free!

Simply register your **Orbiloc Dog Dual** within 30 days of purchase at:
www.orbiloc.com/warranty


Terms and conditions

The Orbiloc warranty does not affect your statutory rights.

The warranty period applies to the **Orbiloc Dog Dual**. Accessories are not covered by the warranty. The warranty of the **Orbiloc Dog Dual** is only valid with the use of original **Orbiloc** replacement parts. Use of other accessories and replacement parts will make the warranty of the **Orbiloc Dog Dual** invalid. Other exclusions include normal wear and tear, oxidation, modifications or alterations, incorrect storage, poor maintenance, negligence, and using the Light for purposes for which it is not designed.

Warranty matters are always handled according to our current conditions of warranty. See the full warranty terms and conditions at:
www.orbiloc.com/warranty


GETTING STARTED

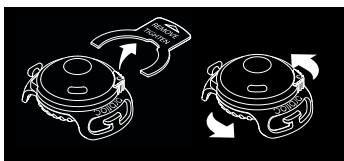


Remove the **Battery Sheet (4)**.

Tighten the **Base (7)** and you are ready to use your **Orbiloc Dog Dual**.

ON / OFF / STEADY / FLASH

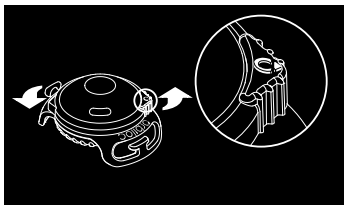


The **Orbiloc Dog Dual** is very user-friendly; just turn the **Mode Selector Ring (2)** to the left or right.

The triangle  indicates the desired function.

Flashing (●●) and Steady-on (■) symbols are found on the top of the **Lens (1)**.

CHANGE MOUNT

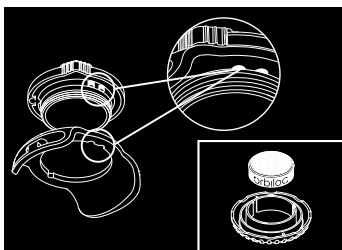

Unscrew the **Base (7)** of the **Orbiloc Dog Dual** and remove the **Orbiloc Mount**.

Make sure that the **Mode Selector Ring (2)** is clicked firmly onto the **Lens (1)**. Please note that the part of the **Mode Selector Ring (2)** with the small magnet has to be placed in one of the four semi-circles on the **Lens (1)**.

Place the new **Orbiloc Mount** in the designated guide pins on the **Lens (1)**.

Make sure that the **Battery Pack (6)** is placed with the **+** symbol facing down in the **Base (7)** of the **Orbiloc Dog Dual**.

Screw the top parts and **Base (7)** of the **Orbiloc Dog Dual** back together again.

ORBILOC ACCESSORIES

Get the most out of your **Orbiloc Safety Light** with the Orbiloc vast variety of mounts, replacement parts and **Orbiloc Service Kit**.

ORBILOC SERVICE KIT

The **Orbiloc Service Kit** makes maintaining your **Orbiloc Dog Dual** quick and easy. The **Orbiloc Service Kit** contains a **Lithium Battery Pack (6)** (2 x CR2032) and an **O-ring (3)** lubricated with silicone.

The silicone lubrication helps ensure the waterproofness of the light, and it is therefore important to thoroughly lubricate the new **O-ring (3)** before replacing the old one.



Should your dog be in and out of water often, the **O-ring (3)** should be lubricated with silicone and the light should be rinsed after each time (please refer to page 6). Save the packaging of the **O-ring (3)** in order to re-lubricate the **O-ring (3)** in the excess silicone.

NOTE; The output and battery-lifetime of the light can only be guaranteed with the use of the original Orbiloc Lithium **Battery Pack (6)**.




NOTE; If using 2 single batteries make sure that both batteries with the **+** symbol is facing down. Sometimes it is also necessary to pull the middle part of the battery spring a bit towards yourself.

CHANGE BATTERY AND MAINTAIN

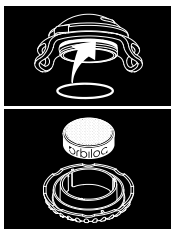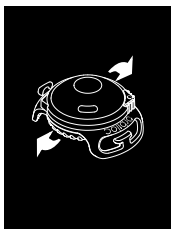


Unscrew the **Base (7)** of the **Orbiloc Dog Dual** and replace the old **O-ring (3)** with a new from the **Orbiloc Service Kit**.

Replace the old **Battery Pack (6)** with a new **Battery Pack (6)** (with the **+** symbol facing down) in the **Base (7)** of the **Orbiloc Dog Dual**.

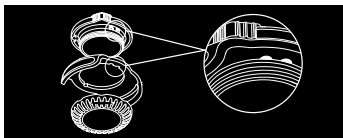


Make sure that the **Mode Selector Ring (2)** is clicked firmly to the **Lens (1)**. Please note that the part with the small magnet has to be placed in one of the four semi-circles on the **Lens (1)**, and that the **Orbiloc Quick Mount (5)** is placed in the designated guide pins on the **Lens (1)**.


Screw the top parts and **Base (7)** of the **Orbiloc Dog Dual** together again.

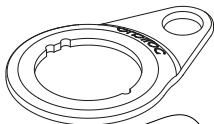


CARABINER MOUNT

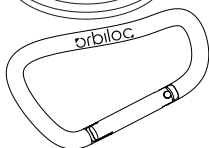

CARABINER

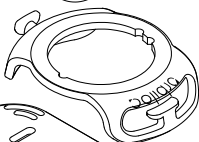


QUICK MOUNT

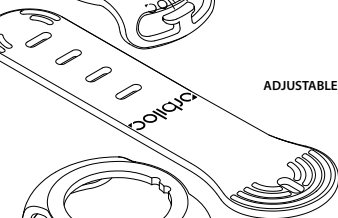


ADJUSTABLE STRAP




BUCKLE MOUNT

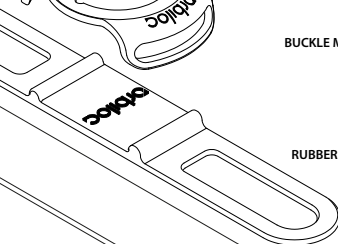


RUBBER STRAP



VELCRO STRAP

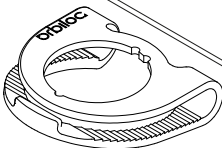

CLIP MOUNT

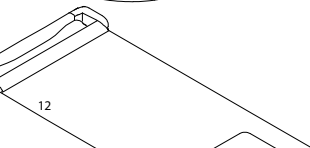

ARMBAND

ORBILOC MOUNTS

The **Orbiloc Dog Dual** includes different mounts that allow you to decide how and where you want to place the light.

The **Orbiloc Quick Mount** and **Orbiloc Adjustable Strap** is the base mount of the **Orbiloc Dog Dual**.


We have also included the **Orbiloc Buckle Mount** that can attach the light directly to your dog's collar, as well as a **Velcro Strap** you can use if the collar or harness cannot open or is too wide.

Our extensive range of mounts allow you to attach your **Orbiloc Safety Light** to different objects and gear.

NOTE; Not all mounts are included with the product. They are a separate purchase.

QUICK MOUNT ADJUSTABLE

The **Orbiloc Quick Mount Adjustable** is an innovative way of conveniently mounting and moving the **Orbiloc Dog Dual** to any harness, collar or leash. The **Orbiloc Quick Mount Adjustable** attachment can easily be adjusted in size and prevents reshaping of any gear.

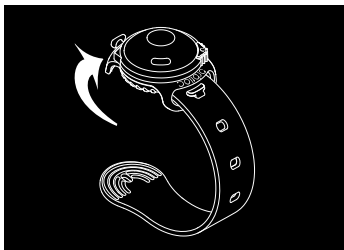

From the outside - with the non-slip grooves facing down - slide the end of the **Orbiloc Adjustable Strap** with the four slots into the gap of the **Orbiloc Quick Mount**, and secure it on the designated hook.

Place the **Orbiloc Dog Dual** on your dogs collar, harness or leash, and pull/wrap the other end of the **Orbiloc Adjustable Strap** around the gear and secure the **Adjustable Strap** on the designated hook on the opposite side of the **Orbiloc Quick Mount**.



Make sure the **Orbiloc Adjustable Strap** is secured tightly to your gear, by adjusting and choosing the slot with the tightest fit around your object. You can quickly switch between the different slots, in order to lengthen or shorten the **Orbiloc Adjustable Strap**.

ORBILOC BUCKLE MOUNT

På hals-
bånd???




Using the **Orbiloc Buckle**, you can attach the **Orbiloc Dog Dual** directly on your dogs collar, or to any other apperal which cannot be more than 24 mm wide and 4 mm thick.

ORBILOC VELCRO STRAP

The **Orbiloc Velcro Strap** enables an easy attachment to collars, leashes or harnesses where you do not wish to leave any mark whatsoever.


Zik zak øverste del

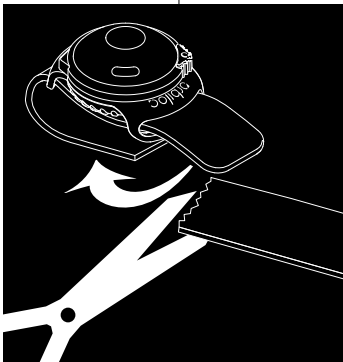


With the hook part facing down slide the **Orbiloc Velcro Strap** through the two holes in the **Orbiloc Buckle Mount**.

Place the **Orbiloc Dog Dual** on your collar, harness or leash and adjust the length of the **Orbiloc Velcro Strap** by cutting excess lenght in order for the **Orbiloc Dog Dual** to be firmly attached to your collar, harness or leash.

ORBILOC RUBBER STRAP

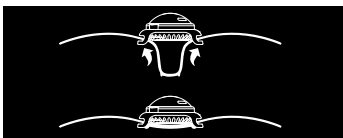

Put the **Orbiloc Rubber Strap** through the two holes in the **Orbiloc Buckle Mount**.

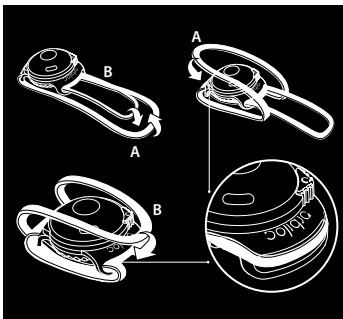


Place the **Orbiloc Dog Dual** on your object. Pull and thereby stretch to double length one end of the **Orbiloc Rubber Strap** under your object and all the way over the **Lens** and place it in the designated gap of the **Orbiloc Buckle Mount**. While pulling the **Orbiloc Rubber Strap** over the **Lens**, the other end of the **Orbiloc Rubber Strap** must pass through the gap in the **Orbiloc Rubber Strap**.

Repeat the above by pulling and stretching the other end of the **Orbiloc Rubber Strap** under your object and all the way over the **Lens (1)** and place it in the designated gap of the **Orbiloc Buckle Mount**.

NB! Each end of the **Orbiloc Rubber Strap** must make a complete tour around the light. Don't be afraid to stretch the **Orbiloc Rubber Strap**.

ORBILOC CARABINER


The **Orbiloc Carabiner** allows a quick and secure attachment of your **Orbiloc Safety Light** to any strap, backpack, life jacket or other apparel.

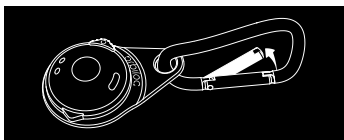

With its easy one-hand and one-finger opening, the light can be moved from place to place within seconds, according to your need and preference.

NOTE; The **Orbiloc Carabiner** is only recommended to be used directly on the collar of large dogs with very thick fur. We do not recommend attaching the **Orbiloc Dog Dual** directly on the collar of smaller dogs with the **Orbiloc Carabiner**, as it could bump and bruise the chest of the dog. For small or medium sized dogs, we recommend attaching the **Orbiloc Dog Dual** with the **Orbiloc Carabiner** on the leash of the dog.


ORBILOC CLIP MOUNT

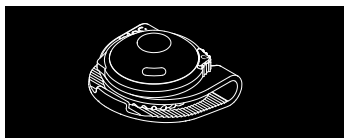


The **Orbiloc Clip Mount** is very convenient should you use the **Orbiloc Dog Dual** on different collars or leashes. It enables a quick change from one piece of equipment to another, fx. onto a winter coat or harness.

The **Orbiloc Clip Mount** has an open end, and is therefore not guaranteed not to fall off in rough play or when running off leash.

ORBILOC ARMBAND

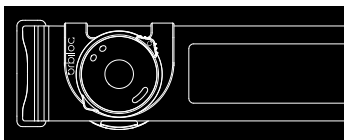

Place the **Orbiloc Safety Light** mounted with the **Orbiloc Clip Mount** on the **Orbiloc Armband**.

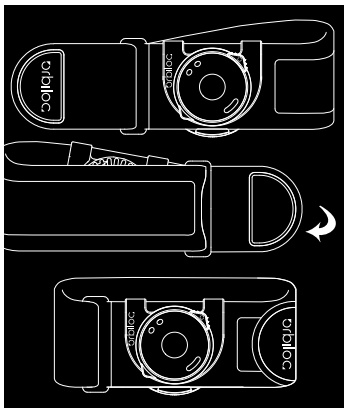

Put the strap through the slot. Adjust the **Orbiloc Armband** so that it fits comfortably, and then secure the Velcro pull-tab.

Do not secure the **Orbiloc Armband** too tightly. You should be able to place two fingers beneath the **Orbiloc Armband**.

Position the **Orbiloc Safety Light** so that the light is facing the traffic.

ADDENDUM

WARNING

Orbiloc Lights are not toys. Keep away from children. They may contain small parts which present a choking hazard for children or pets. Individuals with photosensitive epilepsy should avoid use of this product. Do not open batteries, charge, or heat above 75°C , or burn. Keep both battery and contents dry.

CE MARKING




The Orbiloc Light complies with the requirements for CE marking.

EMC and RoHS; Hereby Orbiloc declares that the Orbiloc Light is in compliance with the essential requirements and other relevant provisions of the EMC and RoHS Directive. The declarations can be found at www.orbiloc.com.

WEEE DIRECTIVE



This symbol on the Orbiloc Light or its packaging indicates that this product shall not be treated as household waste.

 In line with the EU Directive 2002/96/EC for Waste Electrical and Electronic Equipment recycling (WEEE), the Orbiloc Light or its spare parts must not be disposed of as unsorted municipal waste. Please dispose the Orbiloc by returning it to the point of sale or to your local municipal collection point for recycling.

THIS DOCUMENT

Constant product development may mean that some information is not entirely up-to-date. The information in this document is subject to change without notice. Orbiloc shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the performance or use of this material. This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from Orbiloc.

MODEL: Orbiloc Dog Dual

THE SAFETY LIGHT

MADE IN DENMARK

Register for your 3-year warranty
at www.orbiloc.com/warranty

 orbiloc

Langdyssen 5
8200 Aarhus N
Denmark

+45 86 99 88 77
info@orbiloc.com
orbiloc.com